



# 1011XX STEEL TUBE NERF BARS

## INSTALLATION INSTRUCTIONS




### INCLUDED:

Left front and rear sections  
Right front and rear sections  
Adjustment Spacers (2)

### Tools Required:

T-30 Wrench  
Torque wrench  
(Recommended)

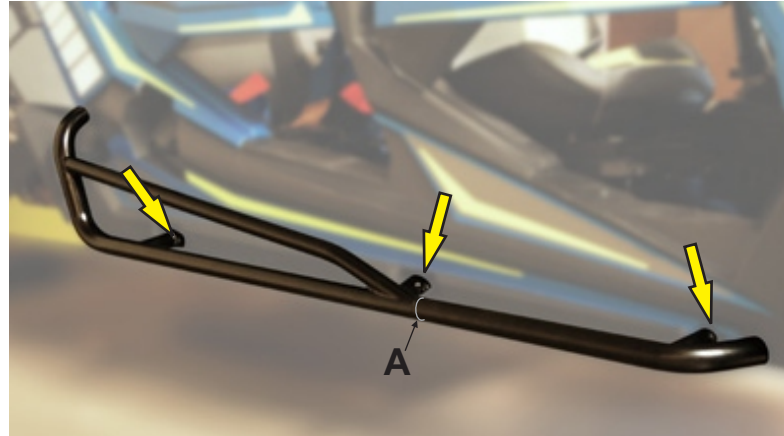

### INSTALLATION:

- 1) Remove the factory fasteners from the locations shown.
- 2) Insert the front section of the bar into the rear section. **NOTE:** There are no fasteners holding the front to the rear section. The fasteners holding the bar to the vehicle will keep the sections together.
- 3) Place the Nerf Bar on the side of the vehicle and align the holes in the bar with the holes in the frame. **NOTE: We have found variations in the mounting locations on the vehicle from the factory, to solve this issue please use the included spacer to fill any gap as required when aligning the front section. (A)**
- 4) Insert the fasteners into the holes and tighten first by hand, and then to 15 ft lbs using a torque wrench. Repeat for other side. Recheck torque values after the first few drives.